



User Manual

Wireless outdoor siren BP-WOSIR01-868



For Inquiries, Please contact:


Security Shop
Vladimira Popovica 6/6/A606
11070 Novi Beograd, Serbia
Tell: +381 11 318 68 68
office@securityshop.rs

Imported/Distributed by Security Shop doo
license of Blaupunkt
www.blaupunkt.com
Made in China

Enjoy it.

1. Product brief

Wireless siren is a kind of alarm device with strong popularity. Working with alarm panel, detector, remote at the same frequency to achieve flash light and alarm sound once trigger. Anti-tamper to avoid intentional damage or dismantle.

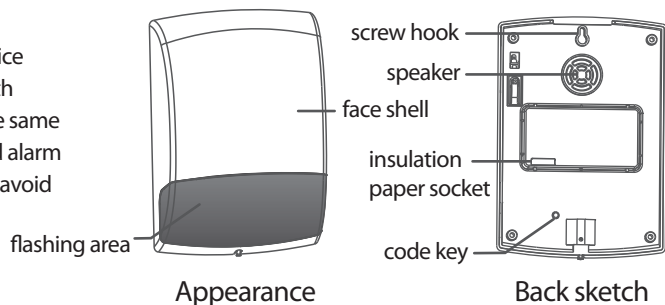

2. Specifications

Model : BP-WOSIR01-868

Voltage: DC 3V

Battery: 4 *LR20 batteries

Static current consumption: average <1.5mA

Alarm current: ≤150mA

Battery low voltage: <2.4V

Modulation method: FSK

Working frequency: 433/868MHz (optional)

Arm and disarm prompt

Armed: the light flashes and the buzzer sounds 2 times each, and the light flashes once every 40S

Disarm: the light flashes and the buzzer sounds once each

Alarm indication

Emergency alarm: LED light flashes, buzzer sounds, duration is set by the host

Anti-dismantling alarm: LED light flashes, buzzer sounds for 1 minute

Alarm loudness: about 110dB

To cancel the alarm: long press the code key for 3S

Wireless distance: ≤200m (open area)


Size: (L*W*H)288*201*14mm

Applicable places: indoor

Working temperature: -10°C ~ +60°C

3. Installation diagram

Method 1:

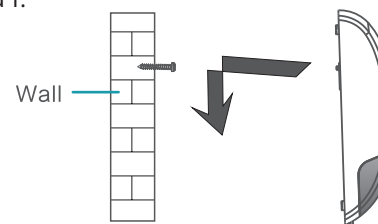

A. Mark drill hole and drill on the wall.

B. Put the siren screw hook aiming at the wall screw, and pull it down until the siren is stable.

Method 2 : First unscrew the screw to open the front cover of siren, second drill 4 screw hole on back cover and fix the back cover on the wall. Then fix the front cover.

Note: We installed battery already before out of the factory, please remove the insulation paper before using

4. Code setting

Automatic code matching: Set the host in the automatic code matching mode, press the code key, the LED light flashes once, the siren sends the code to the host, and the host displays the siren 9-digit address code, which means that the code is successful. (See the host manual for details)

Manual addition: Set the host in manual addition mode, and enter the 9-digit address code on the sticker on the back of the alarm to add.

5. Battery replacement

You need to replace the battery when the siren send low battery signal, please replace the battery as per the following steps:

1. Release the bottom screw and remove the front cover;
2. Release the screw on battery cover and remove it.
3. Replace 4 pieces LR20 battery as per correct polarity;
4. Fix battery cover.
5. Fix the front cover of siren.

